

Fingering Chart / 運指表

SAX fingering / サックス運指

A#3/B \flat 3	B3	C4	C#4/D \flat 4	D4	D#4/E \flat 4	E4	F4

F#4/G \flat 4	G4	G#4/A \flat 4	A4	A#4/B \flat 4	B4

C5	C#5/D \flat 5	D5	D#5/E \flat 5	E5

F5	F#5/G \flat 5

Recorder fingering / リコーダー運指

A \sharp 3/B \flat 3	B3	C4	C \sharp 4/D \flat 4	D4	D \sharp 4/E \flat 4	E4	F4

F \sharp 4/G \flat 4	G4	G \sharp 4/A \flat 4	A4	A \sharp 4/B \flat 4

B4	C5	C \sharp 5/D \flat 5	D5

Electronic wind instrument fingering / 電子吹奏樂器運指

A3	A#3/B \flat 3	B3	C4	C#4/D \flat 4	D4	D#4/E \flat 4	E4
F4	F#4/G \flat 4	G4	G#4/A \flat 4	A4	A#4/B \flat 4	B4	C5
C#5/D \flat 5	D5	D#5/E \flat 5	E5	F5	F#5/G \flat 5	G5	