

# Settings

In this section, you will discover how to setup your **Sylphyo** in the way that best fits your needs.

On the Sylphyo, settings can be quickly accessed using the *Aodyo key* (**^P**), which you can find in the upper part of the front of the instrument.

From the playing position, you can easily reach the **^P** key with your left index finger. Position your left thumb near the *octave keys*, and position your right thumb near the *slider* or the *settings keys*.

There are two places from which you can setup the Sylphyo in various ways:




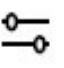


- **Quick settings** allow you to quickly change the base key, the MIDI channel, and other parameters.
- the **Settings menu** offers other, more specific but less often used parameters.

## Quick settings

We designed **Quick settings** so that once you have learned how to operate them, you can quickly change a setting in the middle of your performance, without even having to look at the display.

Each *octave key* allows you to access a different Quick setting. In addition, there are two additional settings that are accessed differently.


To enter *Quick settings*, hold the  $\wedge$  key, as well as the *octave key* corresponding to the quick setting you'd like to change (see below). To get out of *Quick settings*, simply stop touching the  $\wedge$  key. When inside a Quick setting, you can adjust the value either by pressing *settings keys*  $+$  or  $-$ , or by sliding upwards or downwards on the *slider*.




Octave key	Icon	Quick setting and meaning
		<b>Base key</b> Change the base pitch of the Sylphyo (C3 by default).
		<b>Sound and program change</b> Change the current sound, and send a MIDI program change message for the current MIDI channel.
		<b>MIDI Channel</b> Change the MIDI channel the Sylphyo sends its messages to ( <i>Channel 1</i> by default).




To access the additional parameters (*Volume* and *Breath intensity CC*), just hold the  $\wedge$  key and tap the slider. Perform more taps to access the other additional parameters, and adjust their value just like other quick settings.

## Settings menu

The **Settings menu** allows you to change many parameters that are less often tuned.

To enter the *Settings menu*, hold the  key and swipe your thumb all the way from the very bottom to the top of the slider<sup>1</sup>.

Once in the menu, to select a menu item, tap the  and  octave keys, or slide upwards or downwards on the slider. To confirm the menu item, execute its action, or start modifying its value, press the  octave key, or tap the slider.

To go back a page, tap the  key, or swipe the slider from top to bottom. To exit the *Settings menu*, repeatedly tap the  key, or swipe the slider from top to bottom while holding the  key.

The following will recapitulate the different sections of the *Settings menu*.

## Keys

This section allows you to change the fingerings of the Sylphyo, as well as several parameters and functions pertaining to the note keys.

### **Fingering**

If you are used to a particular wind instrument, you can select the corresponding fingering in this list. For details on the fingerings, please see the corresponding section at the end of this guide.

**Default:** Recorder